

Danfoss

Data Sheet

Solenoid valve and coil Type **CSV 2 - CSV 22**

Normally Closed (NC)



CSV is a direct or servo-operated solenoid valve for liquid, suction, and hot gas lines with common fluorinated refrigerants.

CSV valves are for refrigeration, freezing, and air conditioning plants.

CSV valves and coils are sold separately.

Features

- Designed for media temperatures up to 105 $^{\circ}\text{C}$ / 221 $^{\circ}\text{F}$
- Supplied as normally closed (NC) with deenergized coil
- Wide choice of coils for AC and DC
- Suitable for listed refrigerants, including flammable refrigerants
- Available in flare and solder connection versions Flare connections up to ½ in
- Solder connections up to 1 3/8 in
- Small encapsulated coils with long life time under extreme conditions.
- Compact construction with small dimensions, low weight for both valve and coil
- Simple and fast mounting of coil clip-ON / OFF

Media

Table 1: Media features

Features	Description
Refrigerant	R22, R134a, R404A, R507, R407C, R513A, R452A, R1234ze, R600, R600a and R290.
Temperature of medium	-40 – 105 °C / -40 – 221°F (Maximum 130 °C / 265 °F during defrosting)
Maximum working pressure	35 bar / 508 psig

For a complete list of approved refrigerants, visit store.danfoss.com and search for individual code numbers, where refrigerants are listed as part of technical data.

O NOTE:

Special note for R1234ze(E), R290, R600 and R600a: Ignition risk is evaluated in accordance to ISO 5149 and IEC 60335. EX range Zone 2(category 3 IIA).

For countries where safety standards are not an indispensable part of the safety system Danfoss recommends the installer gets a third party approval of any system containing flammable refrigerant.

O NOTE:

- Please follow specific selection criteria stated in the data sheet for these particular refrigerants.
- CSV is not suitable for oil free application. For detailed informations please contact Danfoss
- Flare connections are only approved for A1 and A2L refrigerants.



Product specification

Rated capacity [KW]

Table 2: Rated capacity [KW] for Liquid

Туре	K _v (m³/h)	R22/R407C	R134a	R404A/R507	R290	R513A	R452A	R600	R600a	R1234ze(E)
CSV 2	0.1	2.01	1.86	1.36	2.24	1.66	1.38	2.53	2.25	1.66
CSV 3	0.3	6.03	5.58	4.09	6.72	4.97	4.15	7.6	6.76	4.99
CSV 6	0.54	10.86	10.05	7.35	12.09	8.95	7.48	13.69	12.18	8.98
CSV 10	1.5	30.17	27.91	20.43	33.59	24.85	20.76	38.02	33.82	24.93
CSV 15	2.6	52.3	48.38	35.41	58.22	43.07	35.99	65.89	58.62	43.22
CSV 20	5	100.57	93.04	68.1	111.96	82.83	69.22	126.72	112.74	83.12
CSV 22	6	120.68	111.65	81.72	NA	99.39	83.06	NA	NA	NA

Table 3: Rated capacity [KW] for Suction

Туре	K _v (m³/h)	R22/R407C	R134a	R404A/R507	R290	R513A	R452A	R600	R600a	R1234ze(E)
CSV 2	0.1	0.22	0.16	0.19	0.27	0.16	0.19	0.13	0.15	0.13
CSV 3	0.3	0.67	0.48	0.58	0.82	0.47	0.56	0.38	0.45	0.39
CSV 6	0.54	1.2	0.87	1.05	1.47	0.84	1	0.68	0.82	0.7
CSV 10	1.5	3.33	2.42	2.91	4.08	2.35	2.78	1.89	2.27	1.95
CSV 15	2.6	5.77	4.2	5.04	7.07	4.07	4.81	3.27	3.93	3.38
CSV 20	5	11.1	8.08	9.69	13.6	7.82	9.26	6.3	7.56	6.49
CSV 22	6	13.32	9.69	11.61	NA	9.38	11.11	NA	NA	NA

Rated liquid and suction vapour capacity is based on:

- evaporating temperature $t_e = -10 \text{ °C}$
- liquid temperature ahead of valve $t_1 = 25 \text{ °C}$
- pressure drop in valve $\Delta p = 0.15$ bar

Table 4: Rated capacity [KW] for Hot-gas

Туре	K _v (m³/h)	R22/R407C	R134a	R404A/R507	R290	R513A	R452A	R600	R600a	R1234ze(E)
CSV 2	0.1	0.9	0.69	0.74	1.02	0.64	0.76	0.56	0.63	0.56
CSV 3	0.3	2.69	2.08	2.22	3.07	1.93	2.29	1.68	1.89	1.67
CSV 6	0.54	4.85	3.75	3.99	5.53	3.48	4.12	3.03	3.4	3.01
CSV 10	1.5	13.46	10.38	11.05	15.35	9.66	11.44	8.42	9.45	8.37
CSV 15	2.6	23.34	17.99	19.15	26.61	16.75	19.83	14.6	16.38	14.51
CSV 20	5	44.88	34.59	36.83	51.18	32.21	38.13	28.07	31.5	27.91
CSV 22	6	53.86	41.51	44.2	NA	38.65	45.76	NA	NA	NA

Rated hot gas capacity is based on:

- condensing temperature t_c = 40 °C
- pressure drop across valve $\Delta p = 0.8$ bar
- hot gas temperature t_h = 65 °C
- subcooling of refrigerant $\Delta t_{sub} = 4 \text{ K}$

Valve selection based on capacity calculation

As for extended capacity calculations and valve selection based on capacities and refrigerants, please refer to Coolselector[®]2. Rated and extended capacities are calculated with the Coolselector[®]2 calculation engine to ARI standards with the ASEREP equations based on laboratory measurements of selected valves.



İ

Dimensions and weights - solder connection


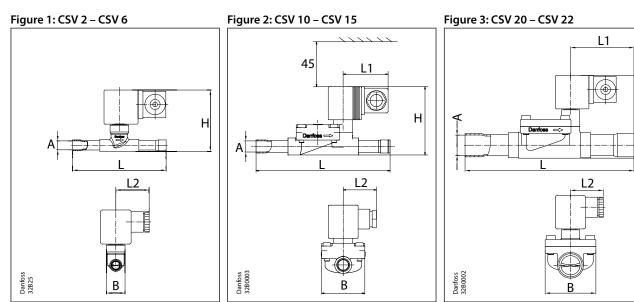


Table 5: Dimensions and weights - solder connection

Turne	A Connect	tion (ODF)	В	н	L	L1	L2	Weight
Туре	[in]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[Kg]
CSV 2	1/4	6	19	56	82	-	34	0.1
CSV 3	1/4	6	19	65	92	-	34	0.1
C3V 5	3/8	10	19	65	96	-	34	0.1
CSV 6	3/8	10	19	65	96	-	34	0.1
C3V0	1/2	12	19	65	112	-	34	0.1
CSV 10	1/2	12	46	73	142	50	34	0.2
C3V 10	5/8	16	46	73	142	50	34	0.2
CSV 15	5/8	16	46	74	167	62	34	0.4
C3V 15	7/8	22	46	76	167	62	34	0.4
CSV 20	7/8	22	53	82	177	64	34	0.6
C3V 20	1 1⁄8	28	53	84	196	74	34	0.6
CSV 22	1 1⁄8	28	62	87	240	91	34	0.9
CSV 22	1 3⁄8	35	62	89	240	91	34	0.9
Coil	-	-	-	-	-	-	-	0.1



Dimensions and weights - flare connection



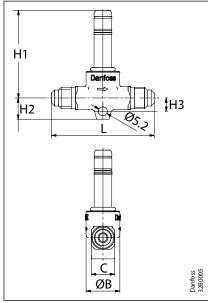


Table 6: Dimensions and weights - flare connection

Turne	Connecti	on (flare)	В	н	L	С	H1	H2	H3	Weight
Туре	[in]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[Kg]
CSV 2	1/4	6	19	63	58	13	49	12	7.5	0.085
CSV 3	1/4	6	19	69	58	13	55	12	7.5	0.096
C3V 3	3/8	10	19	69	76	15	54	13	8.5	0.128
CSV 6	3⁄8	10	19	70	76	15	55	13	8.5	0.128
C3V 0	1/2	12	19	70	76	15	55	13	8.5	0.137



Ordering

Ordering solder connection




Table 7: Ordering - solder connection

	Connection (ODF)		Opening differenti	al pressure with sta	ndard coil ∆P [bar]	ĸ	
Туре	[in.]	[mm]	Min.	Max.(=MOI	PD liquid ⁽¹⁾)	m³/h	Code no.
	[III.]	լաայ		AC	DC	111 / 11	
CSV 2	1/4	-	0	26	26	0.1	032B2040
C3V 2	-	6	0	26	26	0.1	032B2000
	1/4	-	0.05	26	24	0.3	032B2041
CSV 3	-	6	0.05	26	24	0.3	032B2001
C3V 5	3/8	-	0.05	26	24	0.3	032B2042
	-	10	0.05	26	24	0.3	032B2002
	3/8	-	0.05	26	26	0.54	032B2043
CSV 6	-	10	0.05	26	26	0.54	032B2003
000	1/2	-	0.05	26	26	0.54	032B2044
	-	12	0.05	26	26	0.54	032B2004
	1/2	-	0.05	26	26	1.5	032B2045
CSV 10	-	12	0.05	26	26	1.5	032B2005
	5⁄8	16	0.05	26	26	1.5	032B2006
CSV 15	5⁄8	16	0.05	26	26	2.6	032B2007
CSV15	7/8	22	0.05	26	26	2.6	032B2008
	7/8	22	0.05	26	26	5.0	032B2009
CSV 20	1 1/8	-	0.05	26	26	5.0	032B2050
	-	28	0.05	26	26	5.0	032B2010
	1 1/8	-	0.05	26	26	6.0	032B2051
CSV 22	-	28	0.05	26	26	6.0	032B2011
	1 3⁄8	35	0.05	26	26	6.0	032B2012

⁽¹⁾ For detailed MOPD, for media in gas form, please contact Danfoss.

Ordering flare connection

Figure 8: flare connection



Table 8: Ordering - flare connection

Туре	Connection (flare)		Opening differenti	al pressure with standard coil Δp [bar]	ĸ	Code no.
	[in.]	[mm]	Min.	Max.(=MOPD liquid ⁽¹⁾)	m³/h	
CSV 2	1⁄4	-	0	26	0.1	032B2030
CSV 3	1⁄4	-	0.05	26	0.3	032B2031
C3V 5	3⁄8	-	0.05	26	0.3	032B2032
CSV 6	3/8	-	0.05	26	0.54	032B2033
C3V 0	1/2	-	0.05	26	0.54	032B2034

⁽¹⁾ For detailed MOPD, for media in gas form, please contact Danfoss.



Ordering solenoid coil with DIN Terminal box IP65

O NOTE:

For use with R290, the Coil with DIN Plug (code 034Z2014) is validated in accordance to ISO 5149, IEC 60335 (ref. IEC/EN 60079-15). Ignition risk is evaluated in accordance to ISO 5149 and IEC 60335 (ref. IEC/EN 60079-15).

- Please make sure that there is no spark, arc on the spade connection during the application.
- If coils are below IPx5, they must be protected against ultraviolet, moisture and major impact, especially the connection of coils.
- Always install a fuse ahead of the coil to avoid short circuit.
- The coil should be used in area of not more than pollution degree 2.
- Use of socket cable with suitable mechanical lock function to connect with coils.
- Follow the installation guide to mount the coil correctly.

O NOTE:

Please follow specific selection criteria stated in the data sheet for this particular refrigerants.

Ordering coil with DIN Plug

Figure 9: Coil with DIN Plug




Table 9: Ordering - Coil with DIN Plug

Turne	Power consumption	Frequency	Voltage[V]	Code no.
Туре	[W]	[Hz]	[AC]	Code no.
CSV 2 – CSV 22	6	50/60	220	034Z2014 ⁽¹⁾

⁽¹⁾ The 034Z2014 is exclusively for China market, coil and din plug are included, IP65. Spare parts of the coil for other region and DIN plug are available on request.

Ordering coil with DIN spade connection

Figure 10: Coil with DIN spade connection




Table 10: Ordering Coil - DIN spade connection

Туре	Voltage[V]	Frequency	- Power consumption -	Code	Code No.		
туре	[AC]	[Hz]	Power consumption	Industrial Pack	single pack		
	24	50/60		-	042N7608		
	230	50/60	Holding: 6W 12VA Inrush: 26VA	-	042N7601		
CSV2-22	240 50/60	-	042N7602				
	12	DC	14W	042N8686	-		
	24	DC	14W	042N8687	042N7687		



Ordering coil cable connection

Figure 11: Coil cable connection




Table 11: Coil cable connection

Turna	Voltage[V]	Frequency	Dower consumption	Code No.		
Туре	[AC]	[Hz]	Power consumption	Industrial Pack	single pack	
	115	50/60		-	042N7662	
CSV2-22	230	50/60	Holding: 6W 12VA Inrush: 26VA	042N8651	042N7651	
	240	50/60	2007	042N8652	-	

Accessories

Figure 12: DIN Plug with sealing ring



Table 12: Accessories

Description	Code no.
DIN Plug (EN175301-803 type A)	042N0156



Certificates, declarations, and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

Some approvals may change over time. You can check the most current status at danfoss.com or contact your local Danfoss representative if you have any questions.

Table 13: Certificates, declarations, and approvals

Document name	Document type	Document topic	Approval authority
032B9610	Manufacturers Declaration	PED/RoHS	Danfoss
033F4006	Manufacturers Declaration	China RoHS	Danfoss

Online support

Danfoss offers a wide range of support along with our products, including digital product information, software, mobile apps, and expert guidance. See the possibilities below.

The Danfoss Product Store



The Danfoss Product Store is your one-stop shop for everything product related—no matter where you are in the world or what area of the cooling industry you work in. Get quick access to essential information like product specs, code numbers, technical documentation, certifications, accessories, and more.

Start browsing at store.danfoss.com.

Find technical documentation



Find the technical documentation you need to get your project up and running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more.

Start searching now at www.danfoss.com/en/service-and-support/documentation.

Danfoss Learning



Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications, industry topics, and trends that will help you do your job better.

Create your Danfoss Learning account for free at www.danfoss.com/en/service-and-support/learning.

Get local information and support



Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert—all in your own language.

Find your local Danfoss website here: www.danfoss.com/en/choose-region.

Coolselector[®]2 - find the best components for you HVAC/R system



Coolselector[®]2 makes it easy for engineers, consultants, and designers to find and order the best components for refrigeration and air conditioning systems. Run calculations based on your operating conditions and then choose the best setup for your system design.

Download Coolselector[®]2 for free at coolselector.danfoss.com.

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

Danfoss

ENGINEERING TOMORROW